

ASUS ROUTER WALL CEILING MOUNT INSTRUCTION:

This Mount will fit for this ASUS Router:

- ASUS Rog Rapture GT-AXE11000
- ASUS Rog Rapture GT-AXE16000
- ASUS Rog Rapture GT-AX11000 PRO

The shipping package include:

- 1x ASUS Router Bracket
- 1x ASUS Router Bracket Template
- 2x Screw 4x35mm
- 6x Screw 3x12mm

You need:

- Screwdriver T10 and T20 (Torx)
- Water level
- Pencil
- (Optional: 2x plasterboard anchors or dowels)

How to mount: (READ CAREFULLY)

I am not responsible for any damage caused by improper use. You do it on your own risk!

1. Place the template on the back of your ASUS router as seen on the picture *Figure 1*.
2. Now place the bracket against the template so that the two notches meet Take a look on *Figure 2*. The arrow on the bracket should normally point in the direction of the nameplate, unless you want to mount the router in an unusual position, the arrow can point in the opposite direction. This makes it possible to attach the router in 45-degree steps. Therefore, you can adapt it to your individual personal use.
3. Pay attention to the exact orientation of the plate. Otherwise, the screws will not fit into the grid lines on the router.
4. Now you can carefully screw in the 6 screws one after the other. It is important that you do this at a slight angle as shown in *Figure 3*. The holes in the bracket already specify the angle. **Caution: If you overtighten the screws, you may damage your router. Therefore, screw with a lot of feeling! It's only a plastic grid ;)**

Now you can prepare the mount or ceiling:

5. Place the template on the wall or ceiling. For wall mounting, the two holes in the template must be horizontal to each other. Use a spirit level as shown in *Figure 4*.
6. Now mark the holes on the wall or ceiling with a pencil. At these points the 4x35mm screws come into the wall. **Work with precision.**
7. OPTIONAL: If you have a drywall, you should use plasterboard anchors and if you have a concrete wall, you need a drill and dowels.
8. Do not screw the screws all the way into the wall or ceiling. Allow both screws to protrude about 6mm from the wall or ceiling. See *Figure 5*.
9. Now attach the router carefully. If the screw heads do not fit properly into the flange of the router mount plate, the tighten the 4x35mm screws more or less.
10. That's it. Enjoy!

IF YOU NEED HELP, FEEL FREE TO CONTACT ME:

shop@investegate.de

I would be very happy to receive a picture of the successful installation!

Please leave a good feedback. THANK YOU!!!



Figure 1.



Figure 2.

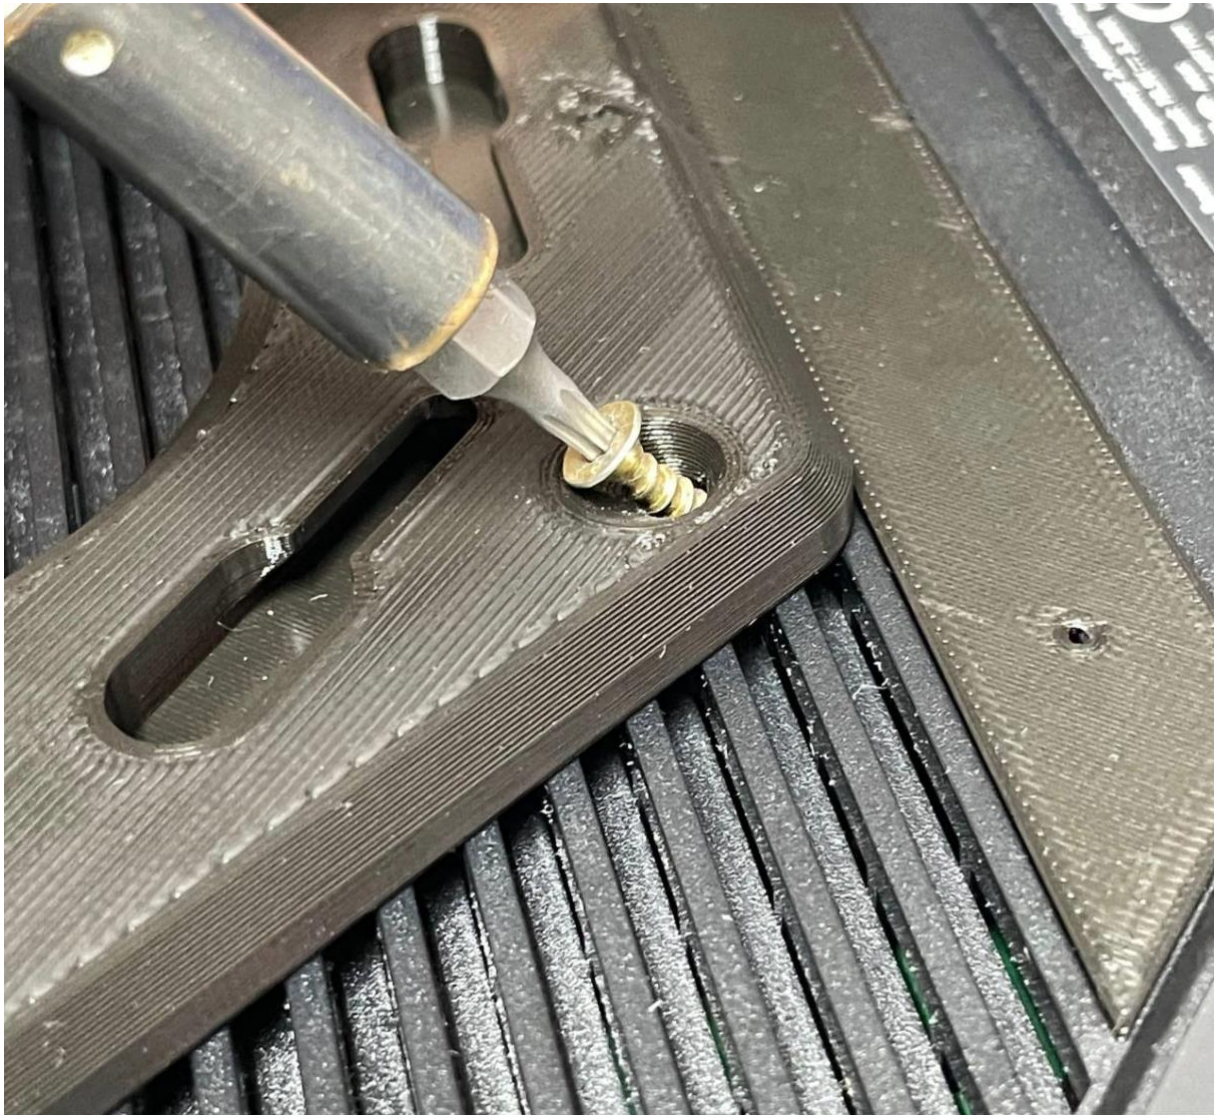


Figure 3.



Figure 4.



Figure 5.